


INSTALLATION, OPERATING AND MAINTENANCE MANUAL

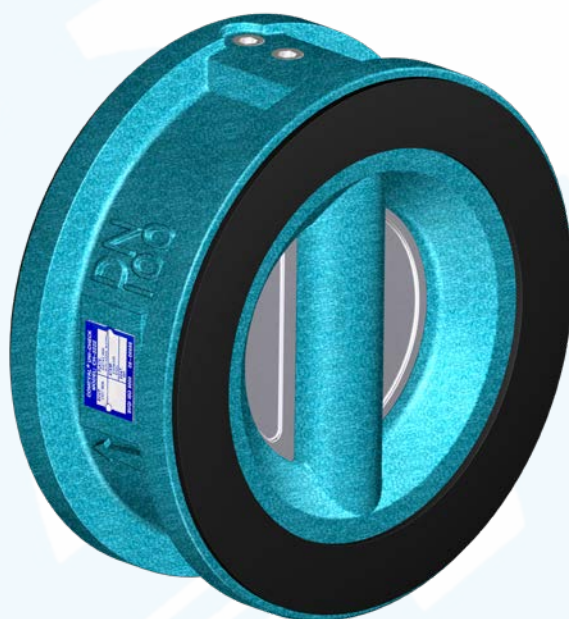

UNIWAT® CH

WAFER DUAL PLATE CHECK VALVES

Contents

1. GENERAL INFORMATION ON THE MANUAL	2	5. INSTALLATION	3
2. NOTES ON POSSIBLE DANGERS	2	5.1 General remarks on installation	3
2.1 Significance of symbols	2	5.2 Requirements at the place of installation	3
2.2 Explanatory notes on safety information	2	6. COMMISSIONING & OPERATION	4
3. PRESERVATION, STORAGE, HANDLING AND TRANSPORT	2	7. CARE AND MAINTENANCE	4
4. DESCRIPTION	2	8. DISMANTLING THE VALVE	4
4.1 General Description/Operating principles	2	9. GOODS RETURN & DISPOSAL	5
4.2 Area of Application	2	10. WARRANTY / GUARANTEE	5
4.3 Technical data - remarks	2	11. PARTS LIST	6
4.4 Marking/nameplate	3	12. ANNEXES	6
4.5 CE marking. Intended use acc. to PED	3	12.1 Declaration of Conformity	6
		12.2 Data Sheet	6

1. GENERAL INFORMATION ON THE MANUAL

- This Manual provides information on safely using the product, being binding for preservation, storage, handling, transport, installation, commissioning, operation, maintenance, repair and disposal, and must be thoroughly observed at any step.
- Please contact the supplier or the manufacturer in case of issues which cannot be solved by reference to this Manual.
- Any deviation from this Manual and sound engineering practice or modification on the product shall be notified to manufacturer for advice or approval.
- In addition, regional safety requirements must be always applied and observed at any step.
- All the work related to the product must be carried out, supervised and inspected by specialist personnel. It is the owner's responsibility to define areas of responsibility and competence and to ensure the proper monitoring.
- This Manual is in accordance with Directive 2014/68/EU on Pressure Equipment (PED).
- For ATEX applications, please refer to ATEX Specific instructions.
- The manufacturer reserves the right to make technical modifications at any time.

2. NOTES ON POSSIBLE DANGERS

2.1 Significance of symbols



Warning of general danger.

2.2 Explanatory notes on safety information

In this Manual dangers, risks and items of safety information are highlighted to attract special attention. Information marked with the symbol above describes practices, which if fail to comply with, can result in serious injury or danger of death for users or third parties or in material damage to the system or the environment. It is vital to comply with these practices and to monitor compliance. The rest of information not specifically emphasized in this Manual, along with Data Sheet and product marking, must also be observed and complied with for safely using the product.

3. PRESERVATION, STORAGE, HANDLING AND TRANSPORT



- *Protect against external force (impacts, vibrations, etc.).*
- *Allow only skilled personnel; suitable handling and lifting equipment must be used. See Data Sheet for weights or consult manufacturer.*
- *Always use suitable protection equipment, and minimize the use of human body force at any step to avoid injuries.*
- *There is a risk of body member (hand, finger, arm...) crushed against any other solid element (wall, pipe, floor, etc.) during handling. Take this into account and handle with care.*
- *There is a crushing hazard between the plates (or discs) and the seat. Ensure the plates are in rest position in case a hand is introduced inside the valve.*
- *Check correct position of nameplate and handle with care to avoid personnel cuttings.*

- Use proper packing for transportation.
- Keep storage protection before installation.
- The valve surface is protected by an epoxy paint. In order to prevent damage, corrosion or rust on the surface, avoid extreme temperatures (keep at 5°C to 50°C), avoid high environmental humidity or corrosive environment. Keep the valves away from direct sunlight, dust, flames or rain. Protect rubbers also against UV light. Do not pile up excessive weight. In case of severe bumping inspect the material for any damage and replace if necessary.

4. DESCRIPTION

4.1 General Description / Operating principles

Wafer Dual Plate Check Valves use two half-sphere discs or plates and a connecting hinge to create a closure element that collapses when positive flow exists, and folds back to a full circular disc and close against a pressure reversal. Discs are preloaded with springs that favor the closing of the valve when no positive flow. Valve diagram with parts can be seen at the last page of the Manual.

4.2 Area of Application


Wafer Dual Plate Check Valves are featured as a light, compact and economic anti-return device to be used on industrial, water and heating plants. Its wafer design suitable to installation between flanges saves space and weight in the installation. They are featured by a low pressure drop if compared to other conventional wafer type check valves.

4.3 Technical data - remarks

For data such as main features, duties/limits of use, dimensions, weights, etc. refer also to Data Sheet.

4.4 Marking/nameplate

Nameplate description of the valve:

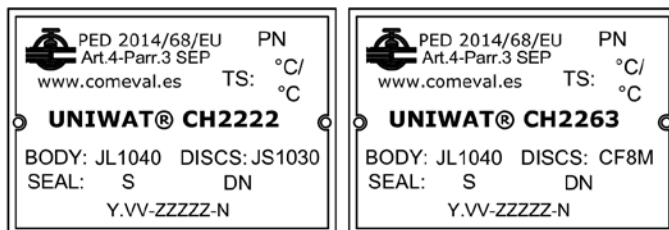

4.5 CE marking. Intended use acc. to PED

PS	DN	
	≤300	350-600
10		
16		Out of scope

Liquids of group 2* compatible with materials of construction, acc. to Directive 2014/68/EU Annex II table 9 up to category I

* Classification of fluids group 2 acc. to Directive 2014/68/EU, Article 13.

Check valve selection, material compatibility, pressure and temperature limits and other essential parameters. Ensure proper safety devices/measures are implemented to prevent exceeding intended use of the product. Contact the manufacturer for advice in case of pressure tests exceeding the intended use. Refer to Data Sheet and consult the manufacturer for further information.

Mark	Description
	Manufacturer logo
www.comeval.es	Website of manufacturer
UNIWAT®	Brand
CH2222/CH2263	Valve type
S	Seal material (EPDM, NBR)
Y.VV	Manufacturing year (Y.16 = 2016)
ZZZZ-N	Batch / Serial no.
TS	Min. / max. temperature
JL1040	Body material
JS1030 / CF8M	Discs material
PED 2014/68/EU	Directive 2014/68/EU
SEP	Sound Engineering Practice
PN	Nominal pressure (max. pressure in bar)
DN	Nominal Diameter

5. INSTALLATION

5.1 General remarks on installation

The following points should be taken into account in addition to the general principles governing installation work:



ATTENTION!

- Before installation, make sure previous chapters are thoroughly followed.
- Ensure safe access and working conditions for proper performance.
- Observe all applicable safety measures during installation.
- Remove remaining packing/storage protection if present.
- Lay pipelines such that damaging transverse, bending and torsional forces are avoided.
- Protect valves from dirt during construction work. The interior of the valve and the pipeline must be free of foreign particles.
- Protect the valve soft parts from heating caused by welding works at the plant during commissioning.
- Avoid mechanical damage to the seat, discs and rubber gaskets.
- Follow the arrow in the body for normal flow direction for installation. The valves can be assembled vertically on horizontal pipeline, with hinge pin in vertical position, or horizontally on vertical pipeline with normal flow upwards.
- There is a crushing hazard between the discs and the seat. Ensure the discs are in rest position in case a hand is introduced inside the valve.
- When installing the valve, there is a crushing hazard between valve and pipe system. Mind the hands to avoid it.
- Install the valves always between flanges, using integral rubber gaskets provided with each valve. Be sure that the contact faces are free of impurities or fluid residues that may compromise the tightness.
- Big sizes are provided with eye bolt to ease their correct fitting between flanges in horizontal pipelines. For valves without eye bolt installed in horizontal pipeline, make sure the hinge pin is in vertical position.
- In order to fit the valve between flanges, insert one or two stud bolts and tighten them with nuts without forcing. Set it on the already inserted stud bolt. Once centered, insert the other stud bolts and tighten them with nuts diagonally and gradually. Valve should fit smoothly between flanges without building any tension.

5.2 Requirements at the place of installation

- Downstream from a disruptive element (pump, valve, elbow, pipe reduction) leave as much distance as possible; minimum distance recommended: 6 times the valve diameter (6xDN).
- Upstream from a disruptive element leave at least a distance of 2xDN.
- Aggressive environmental conditions may reduce the life span of the product. Consider special construction/protective measures in such a case.
- Consider the interaction between the system and the equipment. Foresee elements to absorb vibrations, pipe dilations, guides, anchoring and proper support according to the weight of the components.
- The system and operation protocol should be conceived in such a way to avoid high velocities. Prevent pulsing flow or water hammers, which are very harmful for valves and the rest of the components.
- Flooding of the product is not recommended.
- Allow enough space for valve installation, operation and maintenance.

- It is recommended to install a proper sized mesh strainer upstream the valve in order to protect seating surfaces from abrasion or erosion that could lead to seat leakage.
- Planners / construction companies or the owner are responsible for positioning and installing products.

6. COMMISSIONING & OPERATION



ATTENTION!

- Before commissioning the valve, check the material, pressure, temperature, flow direction and other essential parameters. Always use the product within the scope of intended service and operating duties.
 - Before commissioning, make sure previous chapters are thoroughly followed.
 - Regional safety instructions should be adhered to.
 - It is essential to flush the pipe system thoroughly to eliminate all the particles and impurities which could remain in the pipes and particularly welding residue, chips, tool remains, etc. that could damage the equipment during start-up. Ensure that during cleaning of the pipe system, any chemicals used and temperature are compatible with the valve construction.
 - Temperatures above 50°C or below 0°C may cause personnel injuries if valves are touched.
 - Leakage of media through valve, between counterflanges or at closing may also cause scalding, health harm, pollution, fire or damage to other parts of the installation depending on the media.
- Use suitable protection equipment when approaching the valve, ensure that the corresponding warning signs are displayed on the valve or surrounding area, and/or isolate the equipment in case of danger.
- Before commissioning a new plant or restarting it after repairs or modification, always ensure that:
 - All work has been completed correctly.
 - The valve is in the correct position for its function.
 - Safety devices/measures have been implemented
 - The filling, warming-up and starting-up of the system shall be gradual so as to avoid any inadmissible stress. Check for tightness in valve connections and retighten crosswise and gradually if necessary until leakage elimination.

- Ensure valve surface is in good condition and retouch coating protection when needed.
- In case of risk of media freezing inside the valve, take due measures to avoid it.

7. CARE AND MAINTENANCE

The operator must define maintenance and maintenance-intervals to meet requirements.

- Check for body, seat and connections tightness.



ATTENTION!

- Before disassembling the valve, note chapters 3, 8 & 10.
- There is a crushing hazard between the plates and the seat. Ensure the plates are in rest position in case a hand is introduced inside the valve.
- Check the valve surface inside and outside and retouch coating protection when needed. If advanced corrosion or erosion is observed, double check service and valve features and replace the valve properly.

After any maintenance work please refer to chapters 5 and 6 for installation / commissioning.

Recommended Spare parts:

Use only original spare parts.

Type and number of each spare part to be stored according to many factors: service level, valves quantity, etc. In many cases a good choice is to keep complete valves as spare part.

8. DISMANTLING THE VALVE



ATTENTION!

The following points must be observed:

- Pressureless pipe system.
- Medium must be cool.
- Plant must be drained.
- Note chapter 3 for proper handling and lifting.
- Additionally, in case of toxic, corrosive, flammable or caustic media:
 - Purge pipe system carefully.
 - Use proper protection equipment to avoid health harm.
 - Adopt proper actions to avoid pollution of the environment.


9. GOODS RETURN & DISPOSAL

- For any returned goods, the issuing company must provide information in written on any hazards and the precaution in case of potentially polluting or harmful residues, or any mechanical damage that could present a health, safety or environmental risk, as enforced by EU Health, Safety and Environment Law, including the Safety Data Sheet of the substances identified as potentially hazardous.
- Valves are recyclable and not expected hazard to the environment, with the exception of soft parts (PTFE and rubber compounds) that should be disposed separately only by approved procedure, and no incineration is permitted.

10. WARRANTY / GUARANTEE

- The extent and period of warranty cover are specified in the "General Sales Terms" of COMEVAL VALVE SYSTEMS valid at the time of delivery or, by way of departure, in the contract of sale itself.
- We guarantee freedom of faults in compliance with state-of-the-art technology and the confirmed application.
- No warranty claims are accepted for any damage caused as the result of incorrect handling or disregard of this Manual, Data Sheet and relevant regulations.
- This warranty also does not cover any damage which occurs during operation under conditions deviating from those laid down by specifications or other agreements.
- Justified complaints will be eliminated by repair carried out by us or by a specialist appointed by us.
- No claims will be accepted beyond the scope of this warranty. The right to replacement delivery is excluded.
- The warranty shall not cover maintenance work.
- Our guarantee coverage does not cover for any commissioning, maintenance or installation of the product or external parts.
- Our guarantee does not cover products proved to have been tampered with or faulted by material wear and tear.
- The Purchaser is responsible for checking that the incoming product is received in good condition and conforms to the ordered specifications. In case of damage caused during transit it is necessary to immediately complain to the carrier within 24 hours. After this time carriers could not assume the derived costs. In case of any deviation in relation to order specifications, please contact us.

11. PARTS LIST

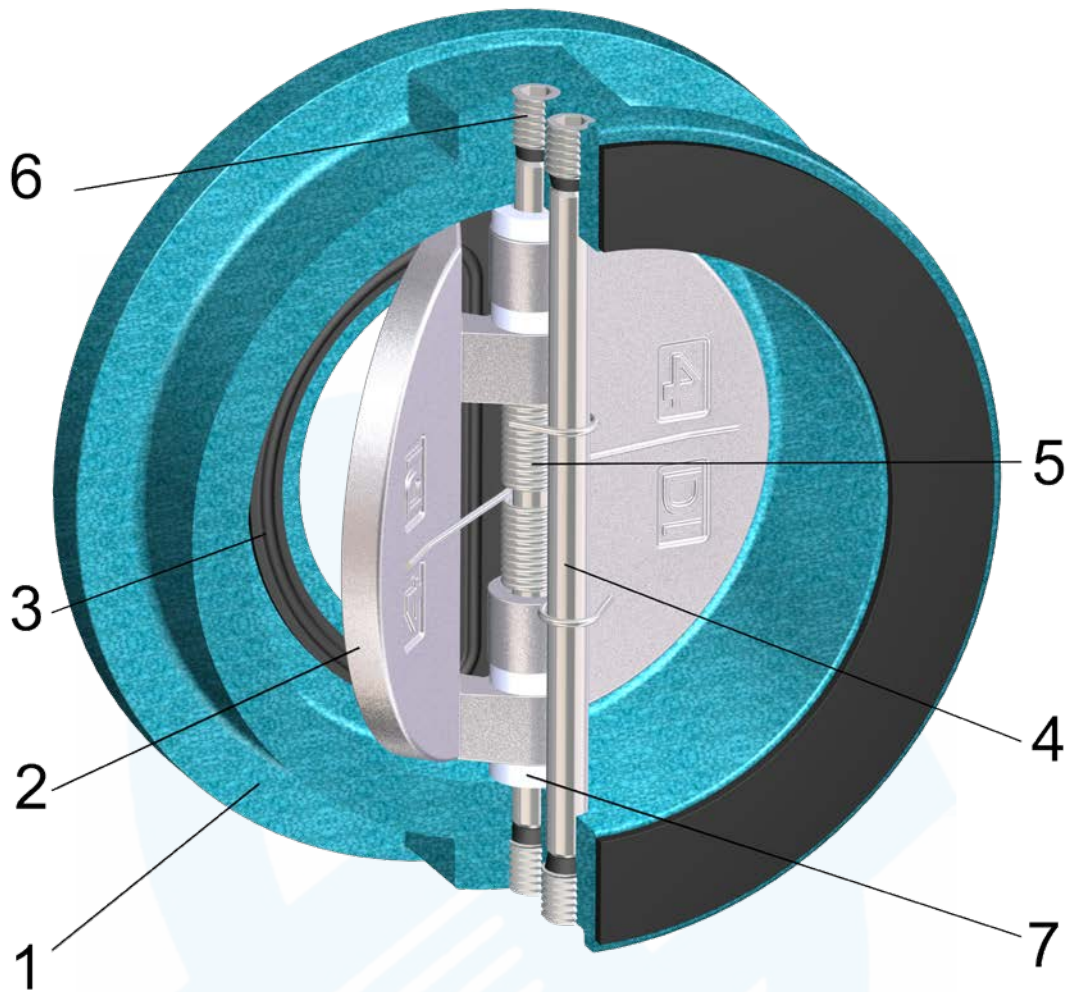

Nº	PART
1	Body
2	Disc
3	Resilient seat
4	Hinge pin
5	Spring
6	Retainer screw
7	Disc bearing

12. ANNEXES

- 12.1 Declaration of Conformity - DC03EN
- 12.2 Data Sheet - DS03

Updated documents on www.comeval.es